
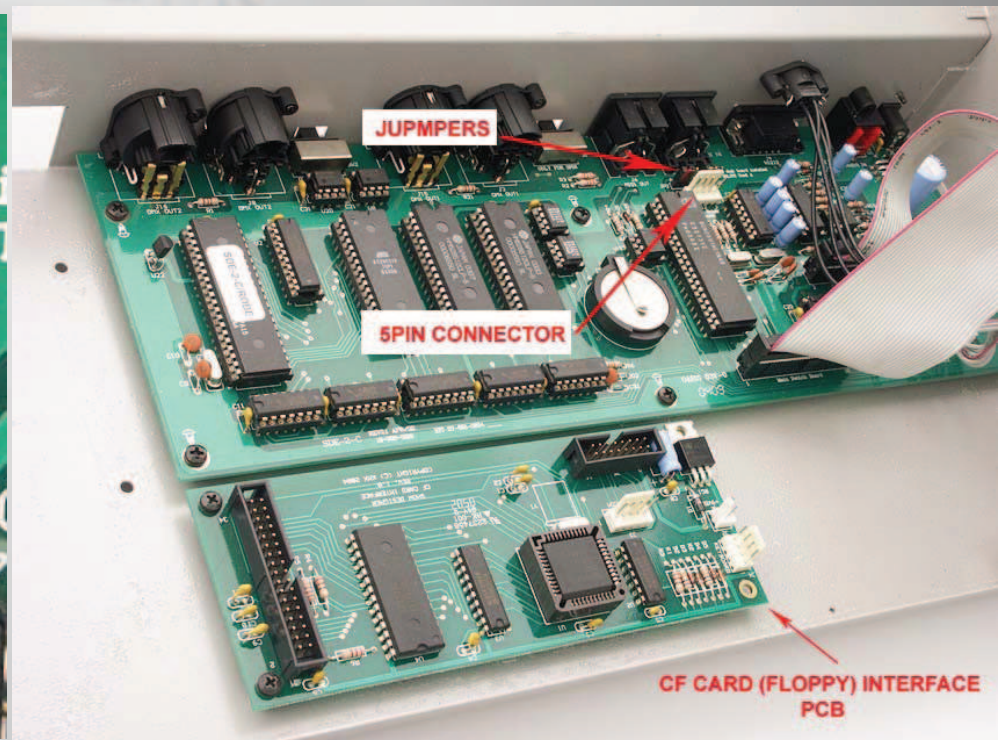


DMX 1024 - enabling rs232 connection

- On motherboard of controller you have to place two jumpers in position A
- Connecting first two contacts of the jumper, then disconnect all cables between motherboard PCB and CF card interface PCB especially 5pin data cable

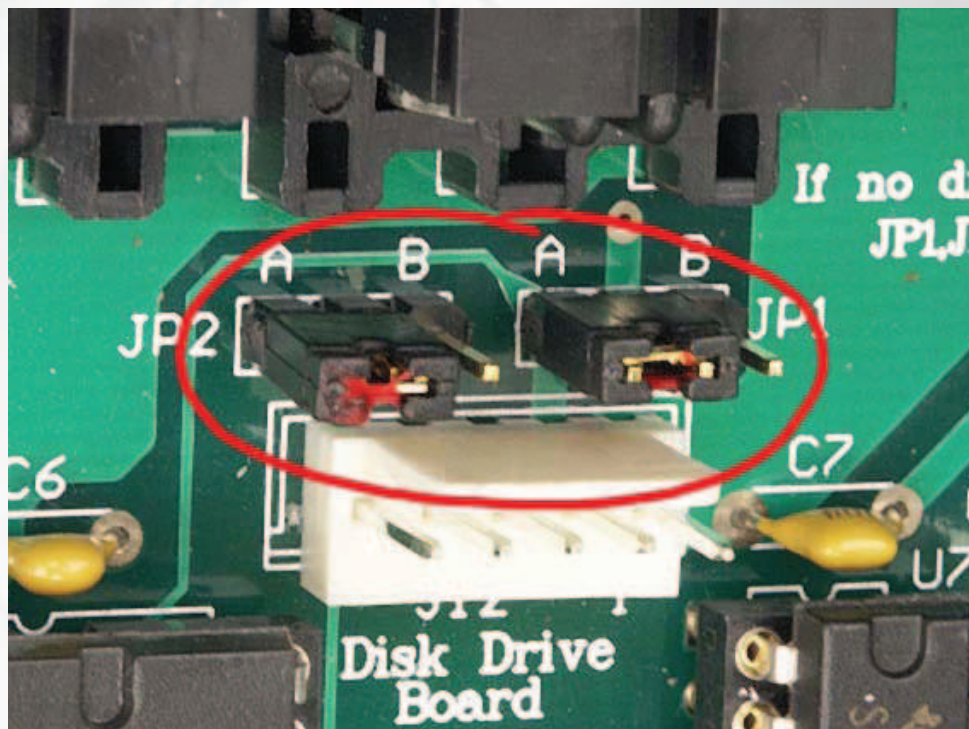

RS232 data transfer

Now you can connect computer to Controller via common serial cable female - female. Run the program Robe Backup DMX, switch on the controller and choose from Menu - Load Fixture Profile From Com Port and then press Enter. Now click on Send in program Robe Backup DMX and choose required Fixture profile then click on Open. The profile will start upload.

